

READ ALL INSTRUCTIONS BEFORE USING

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

KEEP AWAY FROM WATER

As with most electrical appliances, electrical parts are electrically live even when the switch is off. To reduce the risk of death by electric shock:

- 1. Always "unplug it" immediately after using.
- 2. Do not use while bathing.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
 Do not place in or drop into water or other liquid.
- 5. If an appliance falls into water , "unplug it" immediately.
- Do not reach into the water.

WARNING: To reduce the risk of burns, electrocution, fire, or injury to persons:

- 1. An appliance should never be left unattended when plugged in.
- Close supervision is necessary when the appliance is used by, on or near children or individuals with certain disabilities
- 3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by use

 Output

 Description:
- 4. Never operate this appliance if it has a damaged cord or plug. If it is not working properly, or if it has been dropped, damaged, or dropped into water, return the
- dropped, damaged, or dropped into water, return the appliance for examination and repair.

 5. Keep the cord away from heated surfaces. Do not
- wrap/the cord around the appliance.
 6. Never use while sleeping.
- Never use write steeping.
 Do not use outdoors or operate where aerosol (spray) products are danged used or where oxygen is danged administered.
- 8. Do not use an extension cord with this appliance.
 9. This comb is bot when in use. Do not let eyes and o
- 9. This comb is hot when in use. Do not let eyes and dare skin touch heated surfaces.
- 10. Do not place the heated comb directly on any surface while it is hot or plugged in.
- Before plugging in, read the information about dual voltage contained in the instruction section of this

SAVE THESE INSTRUCTIONS

THIS APPLIANCE IS INTENDED FOR HOUSEHOLD USE. OPERATING INSTRUCTIONS.

- This appliance has a polarized plug (one blade is wider than the other). As a safety feature, the plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
- 2. This comb has automatic dual voltage, It can be used at voltages ranging from 100–240 volts AC.
- 3. As an added safety feature, this iron will automatically shut off after 1 hour.

USER-MAINTENANCE INSTRUCTIONS

This appliance does not require special maintenance. If comb does not get hot, return for servicing.

CAUTION:

Extreme care should be used when using this appliance on damaged, relaxed or color treated hair.

TEMPERATURE SETTINGS

Styling temperature depends on hair texture and condition. Generally for:

| Fine, bleached or hair in poor condition | 320°F / 160°C |
|--|---------------|
| Normal hair | 360°F / 182°C |
| Very coarse hair | 400°F / 204°C |

Once your comb reaches the temperature you select, it maintains it although styling.

OPERATION INSTRUCTIONS

- The button contains a power switch, and three indicator lights stand for the different temperature levels, which are 320°F / 160°C 360°F / 182°C 400°F / 204°C
- Press the power switch one time, the indicator will deign to flash and remain on as the comb heat up. Which the temperature is on 320°F / 160°C.
- Each time you press, the temperature will reach to a higher level of temperature with the indicator light flashing together, and the comb stay on heat.
- 4. When you press four times, it will turn off and with no indicator flashing and allow the comb to cool.

 This comb has automatic dual voltage. It can be used at voltages ranging from 100 to 240 volts AC. As an added safety feature, this iron will automatically shut off after 1 hour.

HOW TO USE IT

- Grasp a section of hair and hold away from the scalp.
 Insert the pressing comb into the hair, so hold the section of hair firmly against the back of the comb. Caution:Do not let the pressing comb touch your bare skin or scalp.
 Burns may result. Do not use comb with aerosol or other flammable hair products.
- Slowly turn the comb away from you and move it through the entire hair strand until the hair ends pass through the teeth.
- 3. Repeat procedure throughout all sections of hair until entire head is complete.



TO CLEAN

Unplug comb and allow cooling completely. Wipe the comb with a soft, slightly damp cloth.

TO STORE

Untwist cord before use. After use, re-wrap cord and in a safe place. Do not wrap cord tightly around the appliance. Do not hang the unit by the power cord.